

## CHT Sensor Installation:

1. Remove Spark Plug.
2. Place Probe under spark plug bending probe slightly if necessary to clear head casting or any cooling fins (be careful not to break the washer). Make sure the probe washer sits flat on cylinder head.
3. Reinstall spark plug.
4. Proper position of probe should not interfere with any other components.
5. Tighten spark plug to manufacturers specifications.

