


RBTC2 SERIES RUBBING THERMOCOUPLE INSTALLATION GUIDE:

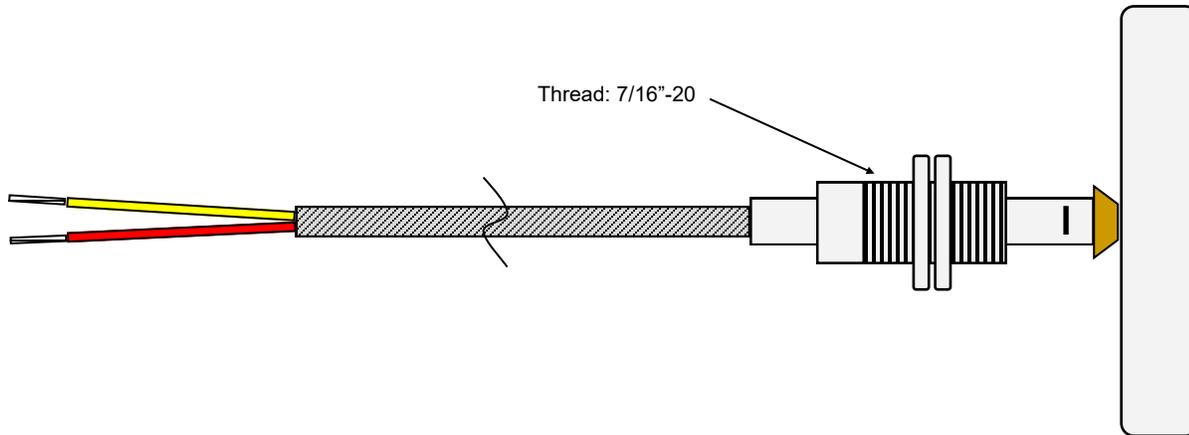

1. Install sensor so tip is lightly touching rotor surface
2. Rotate threaded body 1/2 to 1 full turn
3. Over tightening (applying too much spring force) can reduce life of the sensor tip

It is important to note that the Rubbing Brake Disc & Rotor Thermocouple Sensor is intended for R&D purposes, not permanent use. Since the tip rides against the turning brake rotor it is a wearable item due to the friction. Every application is different but eventually the tip wears down and the sensor should be replaced.

