


BPTC SERIES BRAKE PAD THERMOCOUPLE INSTALLATION GUIDE:

1. Drill thru-hole in pad from backplate side using #31 drill bit (0.120")
2. Route wires through hole from braking pad surface side and set cap flush with pad by lightly tapping with a hammer
3. Sink cap depth about 1 to 2 mm into the pad surface using a flat tipped punch tool. Recommended punch tip OD is between 0.09" to 0.11". Depth may need to be adjusted as brake pad wears.

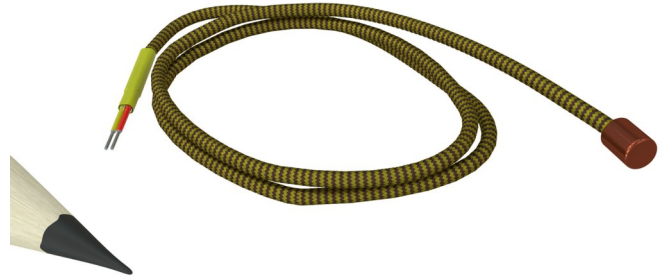

INSTALLATION EXAMPLE

