

Instruction Manual


8-Channel Type K Thermocouple Amplifier + Accelerometer



TCA-MS-K-8-A4

Instruction Manual - TCA-MS-K-8-A4 Thermocouple Amplifier

Amplifier Type K Thermocouple Input Connection:

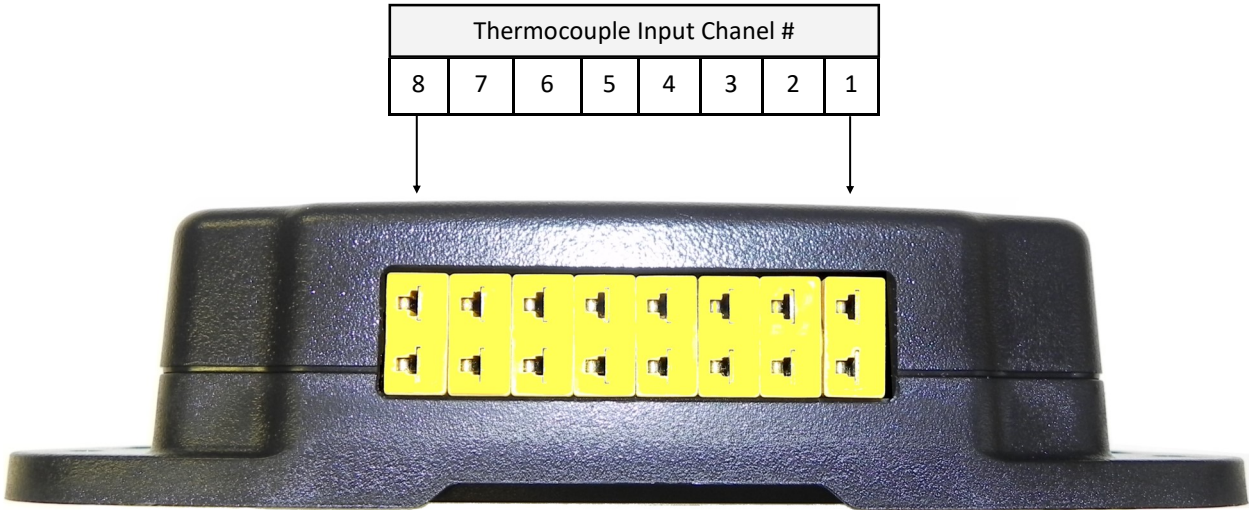

Wiring the Thermocouple Mating Connector:



Use a **Type K** Thermocouple **Mini** Connector (with flat pins)
HGS - The Sensor Connection p/n: CON-MP-MINI-K

Type K Thermocouple International Color Codes:


Country Made:	USA & Canada*	Japan	Germany	British	France
(+) Positive Wire	YELLOW	RED	RED	BROWN	YELLOW
(-) Negative Wire	RED	WHITE	GREEN	BLUE	PURPLE

* Note: All EGT and CHT sensors from HGS - The Sensor Connection follow USA color codes

Wiring Harness Pin-Out:

Pin Number	Color	Description
1	Red	Battery +
2	Unused	
3	Black	Battery Ground
4	Red/Black	ACCEL Output +
5	Orange	TC #7 Output +
6	Orange/Black	TC #5 Output +
7	Blue	TC #2 Output +
8	Blue/Black	TC #4 Output +
9	Unused	
10	Black/White	Signal Ground
11	Unused	
12	Green	TC #8 Output +
13	Green/Black	TC #6 Output +
14	White	TC #1 Output +
15	White/Black	TC #3 Output +

Amplifier Input/Output Connector Pin-Out:

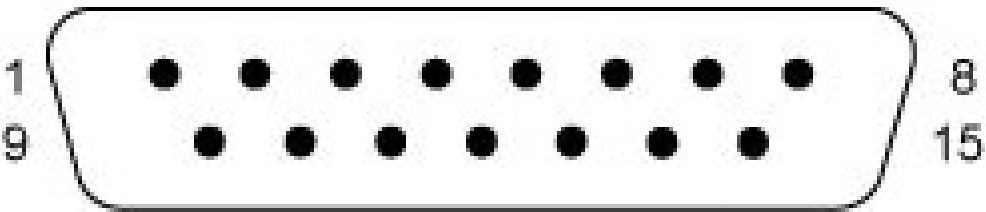

DA-15P (Male Plug Front View)

Analog Outputs; Thermocouple Channels:

Scale Factor (°C)	4 mV/°C (-125 to +1250°C)
Scale Factor (°F)	2.2 mV/°F (-193 to +2282°F)

Volts	°C	°F	Volts	°C	°F	Volts	°C	°F	Volts	°C	°F
-0.50	-125	-193	0.00	0	32	1.70	425	797	3.40	850	1562
-0.40	-100	-148	0.10	25	77	1.80	450	842	3.50	875	1607
-0.30	-75	-103	0.20	50	122	1.90	475	887	3.60	900	1652
-0.20	-50	-58	0.30	75	167	2.00	500	932	3.70	925	1697
-0.10	-25	-13	0.40	100	212	2.10	525	977	3.80	950	1742
0.00	0	32	0.50	125	257	2.20	550	1022	3.90	975	1787
			0.60	150	302	2.30	575	1067	4.00	1000	1832
			0.70	175	347	2.40	600	1112	4.10	1025	1877
			0.80	200	392	2.50	625	1157	4.20	1050	1922
			0.90	225	437	2.60	650	1202	4.30	1075	1967
			1.00	250	482	2.70	675	1247	4.40	1100	2012
			1.10	275	527	2.80	700	1292	4.50	1125	2057
			1.20	300	572	2.90	725	1337	4.60	1150	2102
			1.30	325	617	3.00	750	1382	4.70	1175	2147
			1.40	350	662	3.10	775	1427	4.80	1200	2192
			1.50	375	707	3.20	800	1472	4.90	1225	2237
			1.60	400	752	3.30	825	1517	5.00	1250	2282

Multiplier:

Temperature (°C) = Volts * 250
Temperature (°F) = (Volts * 450) + 32

Example:

Output from amplifier = 2.00 Volts
2.00 Volts * 250 = 500°C
(2.00 Volts * 450) + 32 = 932°F

J9 Jumper Settings

- Position 1: Enable Bipolar Analog Output
 Position 2: Disable Bipolar Analog Output (default)

Analog Output; Accelerometer Channel:

Scale Factor (g)	625 mV/g
------------------	----------

Volts	g	Volts	g	Volts	g
0.00	-4.0	1.70	-1.2	3.40	1.4
0.10	-3.8	1.80	-1.1	3.50	1.6
0.20	-3.6	1.90	-0.9	3.60	1.7
0.30	-3.5	2.00	-0.8	3.70	1.9
0.40	-3.3	2.10	-0.6	3.80	2.0
0.50	-3.2	2.20	-0.4	3.90	2.2
0.60	-3.0	2.30	-0.3	4.00	2.4
0.70	-2.8	2.40	-0.1	4.10	2.5
0.80	-2.7	2.50	0.0	4.20	2.7
0.90	-2.5	2.60	0.1	4.30	2.8
1.00	-2.4	2.70	0.3	4.40	3.0
1.10	-2.2	2.80	0.4	4.50	3.2
1.20	-2.0	2.90	0.6	4.60	3.3
1.30	-1.9	3.00	0.8	4.70	3.5
1.40	-1.7	3.10	0.9	4.80	3.6
1.50	-1.6	3.20	1.1	4.90	3.8
1.60	-1.4	3.30	1.2	5.00	4.0

Multiplier:
g = Volts * 1.6

Offset:
-4.0 g


Example:
Output from amplifier = 5.00 Volts
(5.00 Volts * 1.6) - 4 g = 4.0 g

Specifications:

Input Specifications	
Number of Input Channels	8
Thermocouple Type	K
Measuring Range	-193 to +2282°F (-125 to +1250°C)
Input Connectors	Mini Thermocouple Jacks
Input Resistance	60k Ω
Max Voltage Bias on Input	5.8 V
Analog Output Specifications	
Number of Output Channels	9 Total 8-Thermocouple + Accelerometer
Analog Output Range	-0.5 to +5 VDC
Scale Factor	2.2 mV / °F (4.0 mV / °C) 625 mV / g
Resolution:	Infinite
Response Time	> 1 mS
Non-Linearity	< +/- 2% FRO
Output Connector	Male 15-pin D-sub (DA-15P)

Power Specifications	
Supply Voltage	10 to 32 VDC
Current Draw	< 50 mA
Environmental Specifications	
Operating Temperature Range	+32 to +158°F (0 to +70°C)
Humidity	85% Max. RH (non-condensing)
Liquid & Dust Protection	IP51
Mechanical Specifications	
Housing Dimensions (L x W x H)	5.5 x 3.5 x 1.5 inch
Weight	0.6 lb (265 g)

Housing Dimensions:

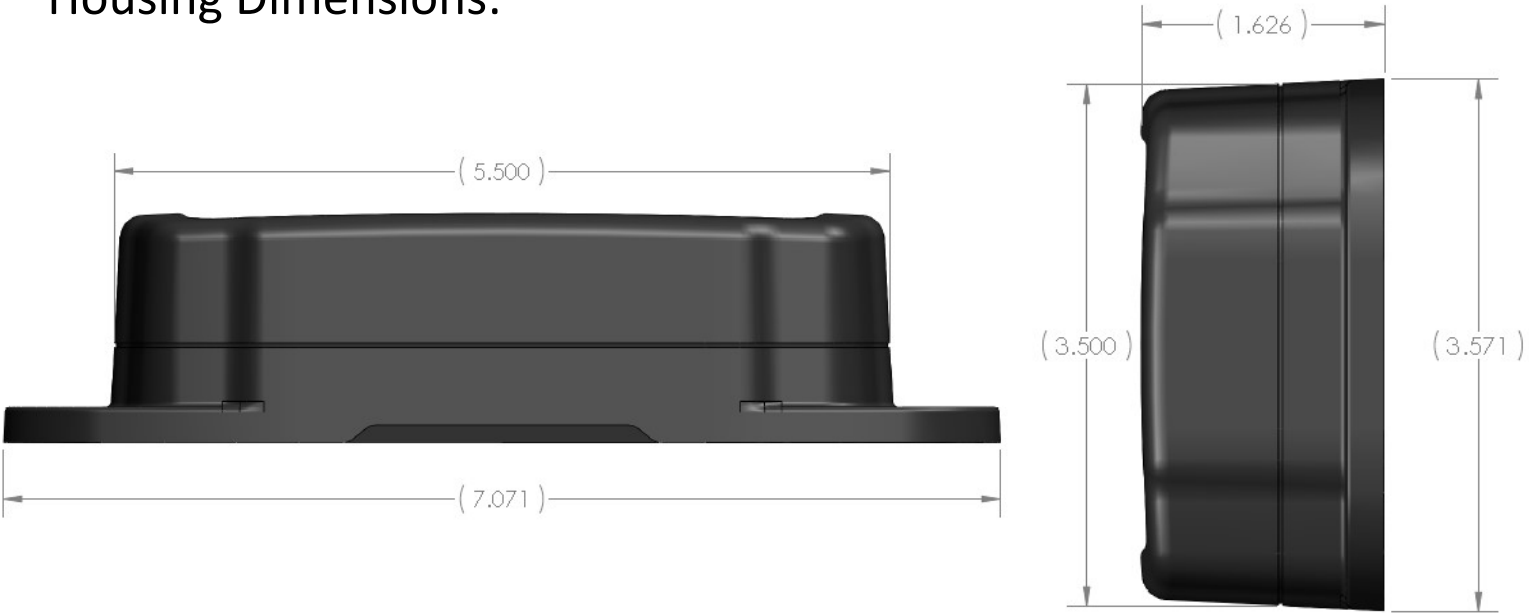

Instruction Manual - TCA-MS-K-8-A4 Thermocouple Amplifier



Danger

- Ensure that the vehicle will remain stationary and turn off the engine before installing this product. Failure to do so could result in a fire, and could make the vehicle move during installation.
- Remove the key from the ignition and disconnect the negative (-) battery terminal prior to installation of this product. Failure to do so could result in a fire caused by an electrical short circuit.
- Take care not to install this product in a way that interferes with safety equipment such as seat belts and air bag systems or vehicle operation equipment such as engine controls, steering wheel or brake systems. Interference with normal operation of the vehicle can result in an accident or fire.
- Solder or use a solderless connector for wiring connections and make sure connections are insulated. In areas where there could be tension or sudden impacts on the wiring, safeguard the wiring with corrugated tubing or other shock absorbent material. Accidental shorts can cause fires.



Warning

- Carefully consider the installation location and driver's operation of the product before installation. Do not install the product where it interrupts driving and the safety deices of vehicle such as the air bag system. Be sure not to install the unit where it could fall. Improper installation or operation could cause the product to fall and damage the vehicle or cause serious danger by impeding driving.
- Do not disassemble or modify this product. Such actions can not only damage or destroy the product but will also void the warranty.
- Do not perform installation of this product immediately after the engine has been switched off. The engine and exhaust system are extremely hot at this time and can cause burns if touched.
- Ensure that the wiring of this product does not have an adverse impact on the other wiring of the vehicle. Any controlling devices or other electronic components of the vehicle could be damaged.
- Please keep children and infants away from the installation area. Children may swallow small parts or be injured in other ways.



Caution

- Insulate any unused wires. If any wires or connectors loosen during installation, please make sure they are correctly reattached.
- Dropping any of the components of this product will result in damage to the product.
- Excessive force on switches/terminals may result in damage to the product.
- Use only the wires provided. If additional wires are required, use the same of quality and gauge wire as is provided with the kit.
- Do not attach wires on the body of the vehicle or engine parts as this may result in damage to the product.
- Install wires away from ignition and also radio signal frequency interference as this could cause the gauges to malfunction.
- Do not place wires near the engine, exhaust pipe or turbine. It may result in damage or fusion of wires.
- Make sure the waterproof processing is done when routing wires in the engine compartment.
- When installing the sensor, do not bend the wire near the sensor body.
- Wear gloves to avoid burns when soldering and cuts when working with wiring.
- Do not share a single fuse with multiple gauges. Every gauge requires an independent fuse.
- Install amplifier away from hot or wet places.
- Do not pull the wires out of connectors forcefully. The connectors may be broken and the wires may be cut. When pulling out the wires, press the lock firmly and unclip the locks of connectors.

Instruction Manual - TCA-MS-K-8-A4 Thermocouple Amplifier

12 MONTH LIMITED WARRANTY

HGSI - The Sensor Connection LLC (HGSI) warrants to the consumer that all HGSI products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12 month warranty period will be repaired or replaced at HGSI's option to the consumer, when it is determined by HGSI that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the HGSI instruments. In no event shall this warranty exceed the original purchase price of the HGSI instruments nor shall HGSI be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to HGSI must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12 month warranty period. Breaking the instrument seal, improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. HGSI disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured or supplied by HGSI.

FOR SERVICE SEND TO:
HGSI - The Sensor Connection
42690 Woodward Avenue, Suite 200, Bloomfield Hills, MI 48304 USA
(248) 636-1515
email us at: sales@HGSIND.com
www.HGSIND.com